









Size: DN 1/4" to 2"

Ends: Female - Female BSP

Min Temperature : - 20°C Max Temperature : + 200°C Max Pressure : 16 Bars

Specifications: With draining cap

Removable stainless steel filter

Materials: Stainless steel




SPECIFICATIONS:

- With draining cap
- Removable stainless steel filter
- Respect the flow direction indicated by the arrow
- · Horizontal or vertical position with descendant fluid
- Mesh 10/10° mm (1000 μ)

USE:

- For common fluids of 2nd group
 Min and max Temperature Ts: 20°C to + 200°C
- Max Pressure Ps : 16 bars

HEAD LOSS GRAPH:

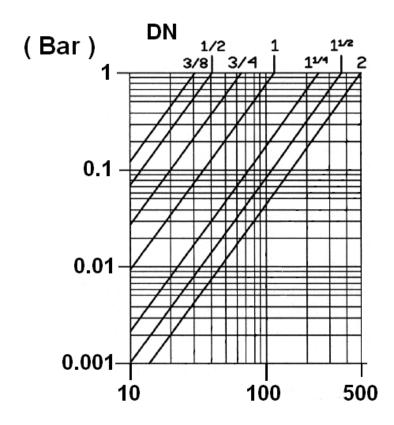

Flow (L/Min)

RANGE:


Stainless steel threaded female BSP cylindrical ends Ref. 230 from DN 1/4" to DN 2"

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail: sferaco@sferaco.fr

Date: 10/15 Rev.03




MATERIALS:

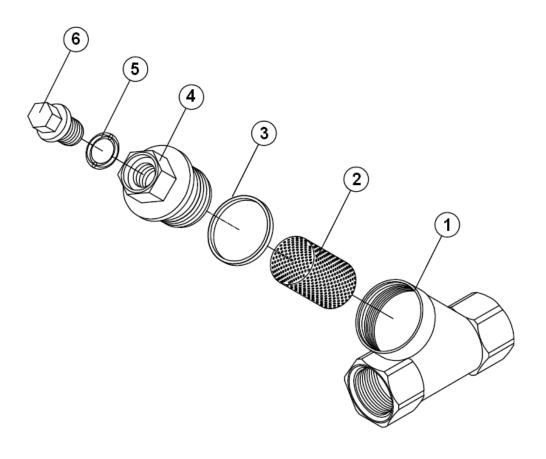


| Item | Designation | Materials | | |
|------|-------------|----------------|--|--|
| 1 | Body | ASTM A351 CF8M | | |
| 2 | Filter | SS 304 | | |
| 3 | Body gasket | PTFE | | |
| 4 | Bonnet | ASTM A351 CF8M | | |
| 5 | Cap gasket | PTFE | | |
| 6 | Сар | ASTM A351 CF8M | | |



SIZE (in mm):

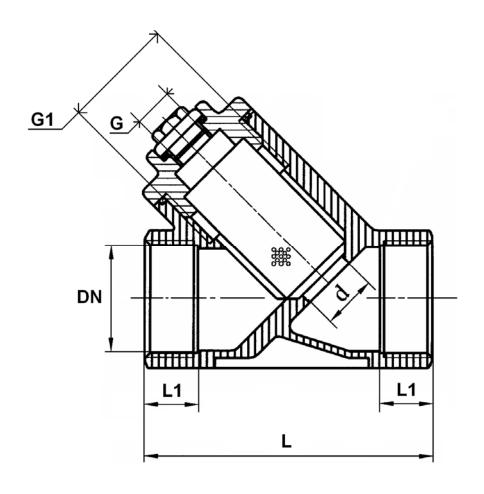

Filter size :

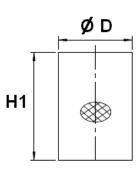

| REF. | DN | 1/4" | 3/8" | 1/2" | 3/4" | 1" | 1"1/4 | 1"1/2 | 2" |
|------|---------------|------------|------------|------------|------------|------------|------------|------------|------------|
| 230 | L | 64 | 64 | 64 | 80 | 89 | 106.5 | 118 | 139 |
| | L1 | 12 | 12 | 13 | 14.5 | 16.5 | 19 | 23 | 23 |
| | Ø d | 10.5 | 12.5 | 15 | 20 | 25 | 32 | 38 | 50 |
| | G | 1/4" | 1/4" | 1/4" | 1/4" | 3/8" | 1/2" | 1/2" | 3/4" |
| | G1 | 23.8 x 1.5 | 23,8 x 1.5 | 23,8 x 1.5 | 29,5 x 1.5 | 39.8 x 1.5 | 41,8 x 1.5 | 49,8 x 1.5 | 59,8 x 1.5 |
| | H1 | 28.5 | 28.5 | 28.5 | 40 | 49 | 54 | 63.5 | 76 |
| | ØD | 19 | 19 | 19 | 23 | 32 | 36 | 44 | 54 |
| | Weight (Kg) | 0.23 | 0.21 | 0.21 | 0.35 | 0.61 | 0.89 | 1.11 | 1.63 |

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail: sferaco@sferaco.fr

Date: 10/15 Rev.03



STANDARDS:

Fabrication according to ISO 9001 : 2008

 DIRECTIVE 97/23/CE : CE N° 0035 Risk Category III Module H

• Threaded BSP cylindrical female ends according to ISO 228/1

INSTALLATION POSITIONS:

Horizontal position



Vertical position (descendand fluid)



ADVICE: Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.



INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES:

- Ensure that the strainers to be used are appropriate for the conditions of the installation (type of fluid,pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the strainers to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

INSTALLATION INSTRUCTIONS:

- Before installing the strainers, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the strainers.
- Ensure that both connecting pipes either side of the strainer (upstream and downstream) are aligned (if they're not, the strainer may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the strainer unit will
 not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection, the
 working of the strainer and can even cause a rupture. To be sure, place the kit in position to ensure the
 assembling will work.
- The theoretical lengths given by ISO/R7 for the tapping are typically longer than required, the length of the thread should be limited, and check that the end of the tube does not press right up to the head of the thread.
- · Never use a vice to tighten the fixings of the strainer.
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the strainer.
- Fluids in the strainer must not contain solid objects (it could damaged the seat).